

JRS5 THERMAL OVERLOAD RELAY

Setting current range
A

0.2-0.28
0.28-0.42
0.4-0.6
0.55-0.85
0.7-1.1
1-1.6
1.4-2
1.7-2.5
2-3
2.8-4.4
4-6
5.2-8
7-11
9-13



JRS5-12/Z

Setting current range
A

0.2-0.28 7-11
0.28-0.42 9-13
0.4-0.6 12-18
0.55-0.85 16-22
0.7-1.1 18-26
1-1.6 24-34
1.4-2 30-40
1.7-2.5
2-3
2.8-4.4
4-6
5.2-8



JRS5-20/F



JRS5-60/F

12-18
16-22
18-26
24-34
30-40
34-50
43-65
54-80
65-93
85-105

MAGNETIC STARTERS



QCX5-K10PM/K11PM



QCX5-K20PM/K21PM



QCX5-K25PM/K35PM

STAR-DELTA STARTER

